




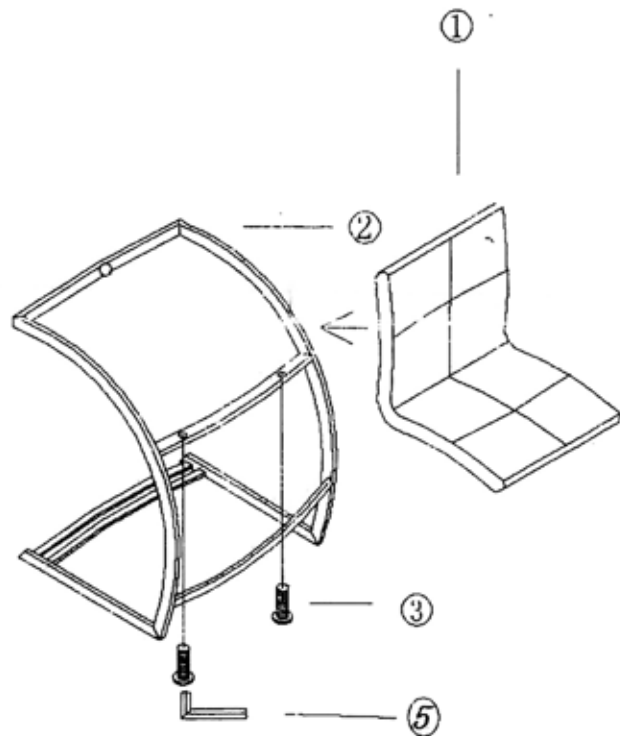
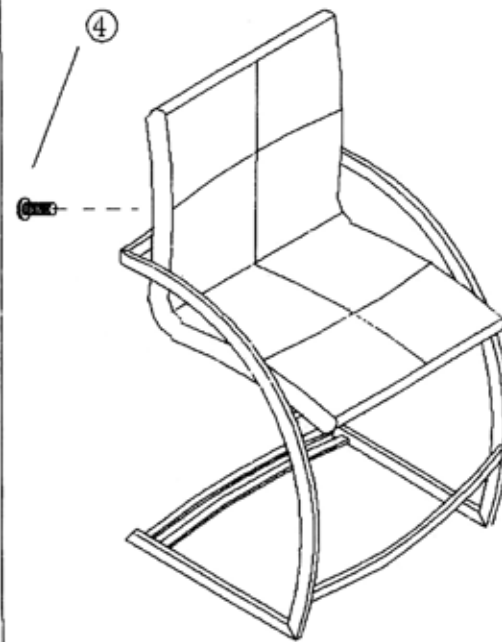


ITEM NO.	① SEAT	② FRAME	③ SCREW	④ SCREW	⑤ WRENCH
D-9065			 M6*35 2 (P)	 M6*25 1 (P)	 Ø4


Assembly Instruction



STEP1



STEP2

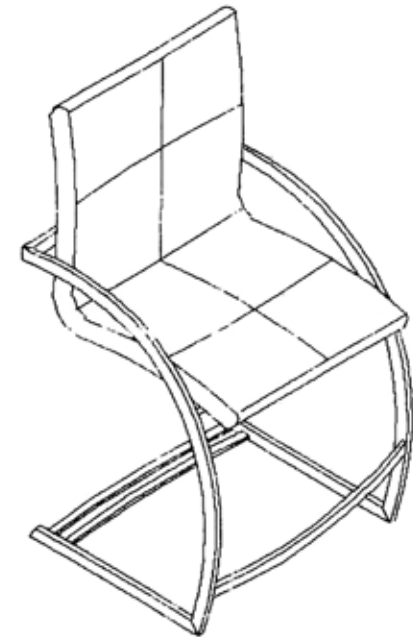

Möbler
Modern Furniture